

Threads n Scissors

Enjoy Your Inspiration!!!

ITH Oven Mitts



Materials

Tear away stabilizer

Heatex batting

**Cotton fabric
(plain and printed)**

**Temporary Adhesive
Spray**

For each mitt you will need to stitch the following:

Design

Backing

Method

Stitch the backing design first.

Hoop 1 layer of tear away stabilizer. Stitch the first color. Place a piece of heatex and a piece of cotton fabric over the stitched area. Use temporary adhesive spray to hold them in place.



Copyright © 2014 Threads n Scissors
All rights reserved. Unauthorized reproduction, in any manner, is prohibited.
[Http://www.threadsncissors.com](http://www.threadsncissors.com)



Threads n Scissors

Enjoy Your Inspiration!!!

Turn the hoop over and place a piece of cotton fabric to the backside of the design, covering the stitched area.




Place the hoop back into the machine and stitch the rest of the design. Remove the stabilizer and trim the fabrics and heatex..


Now for the Mitt

Load the design onto your machine.

Hoop up 1 layer of tear away stabilizer. Stitch the first color. Place a piece of heatex and cotton fabric over the stitched area. Use temporary adhesive spray to hold them in place. Stitch the rest of the design until there are 6 color changes left.

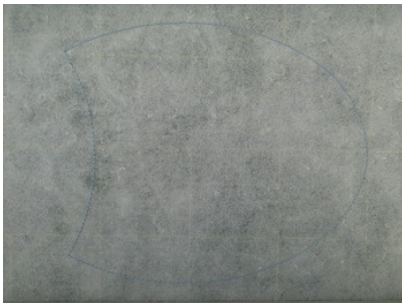

Remove the hoop from the machine. Place a piece of cotton fabric to the backside of the design. Use temporary adhesive spray to hold in place.

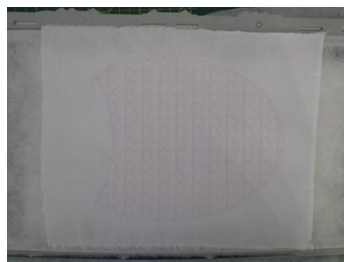




Threads n Scissors

Enjoy Your Inspiration!!!

Stitch the next color. This holds the pocket lining in place. Remove the hoop from the machine and trim away excess fabric and heatex from both sides of the hoop. Stitch the next two colors. This finishes off the pocket edges.

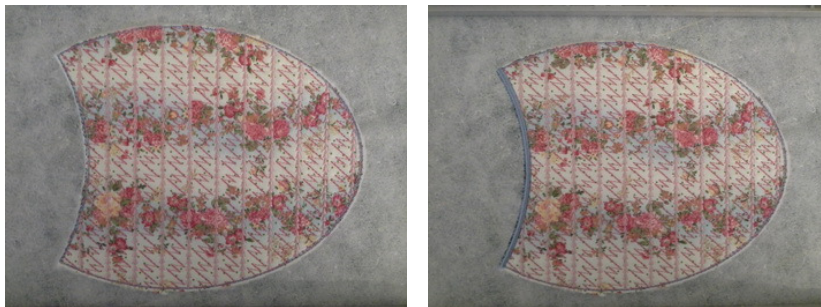

Stitch the next color. This marks the entire design.



Remove the hoop from the machine. Place the quilted backing already stitched to the backside of the design. Use temporary adhesive spray to hold in place.







Threads n Scissors

Enjoy Your Inspiration!!!

Remove the hoop from the machine and trim away excess fabric from the backing. Stitch the last color.

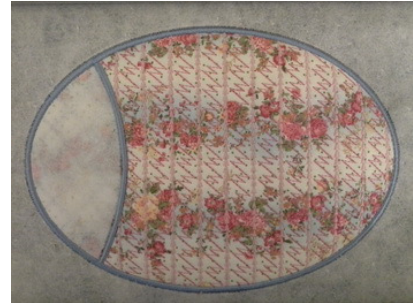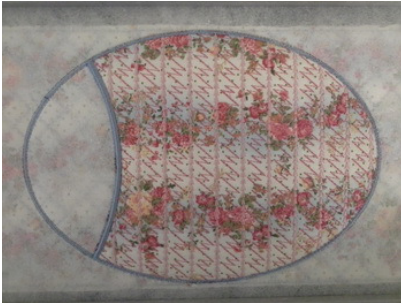

Remove the tea away stabilizer.

Enjoy your oven mitts!!!

